

# CXM

Remote Display for Phocos CXN Charge Controller



- Display for panel current, load current, and battery voltage, Ah, SOC, etc
- Clear, readable 3-digit LCD Display and symbols
- Two push button to select displayed value
- Prepared for DIN rail and wall mounting

Phocos' CXM can be used in combination with Phocos CXN series charge controllers via interface connector.

Phocos' CXM remote display is designed to display panel current, load current and battery voltage of your PV system as true values and status values like charging, overload, low

voltage disconnect as symbols. Additionally you can display several values of CXN's data logger of the past 7 days as Ah, SOC, Battery voltage (morning, evening).

This provides you more detailed information of your PV system.

Type	CXM
Voltage range	display voltage range of your CXN
Current range	display current range of your CXN
Ambient temperature	-25 to +50 °C
Length of connecting wire	2 m
Dimensions (W x H x D)	72 x 68 x 29 mm
Weight	94 g (with connecting wire)
Type of protection	IP22